




FEAST INSTALLATION GUIDE





Installation of FEAST software

1. Double-click FEAST setup.
2. Click on the check box **License terms** and click **INSTALL**.

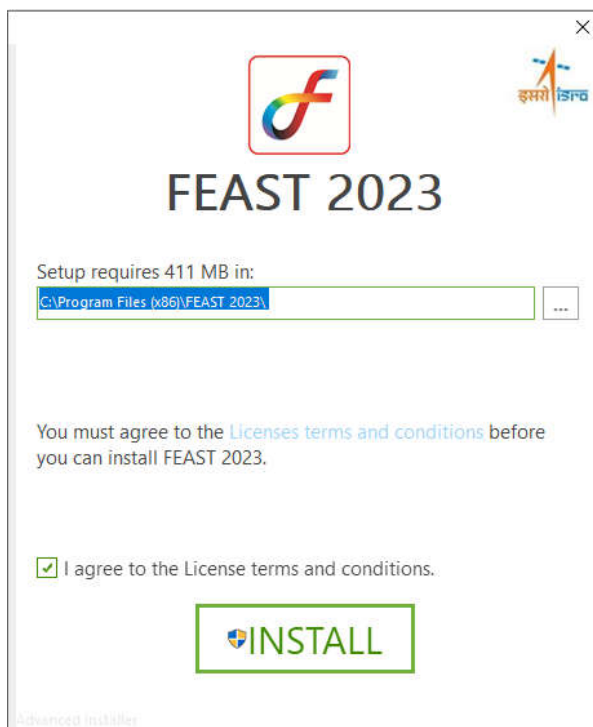


3. Installation process starts, wait for a few minutes.






4. Python installation window appears, if you want to install Python with default settings, first enable the tick mark in **Add Python 3.8 to PATH** then select **Install Now** option.

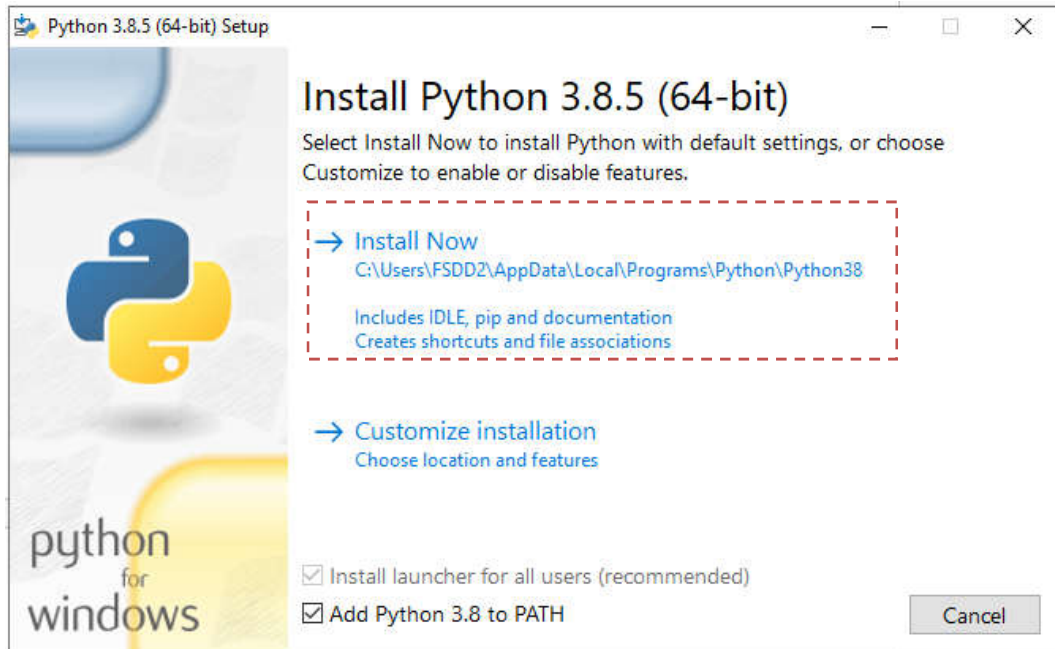


5. Alternatively, you can select **Customize installation** to enable or disable Python features.
Note: If Python is already installed, select **Modify** option and follow the remaining steps.

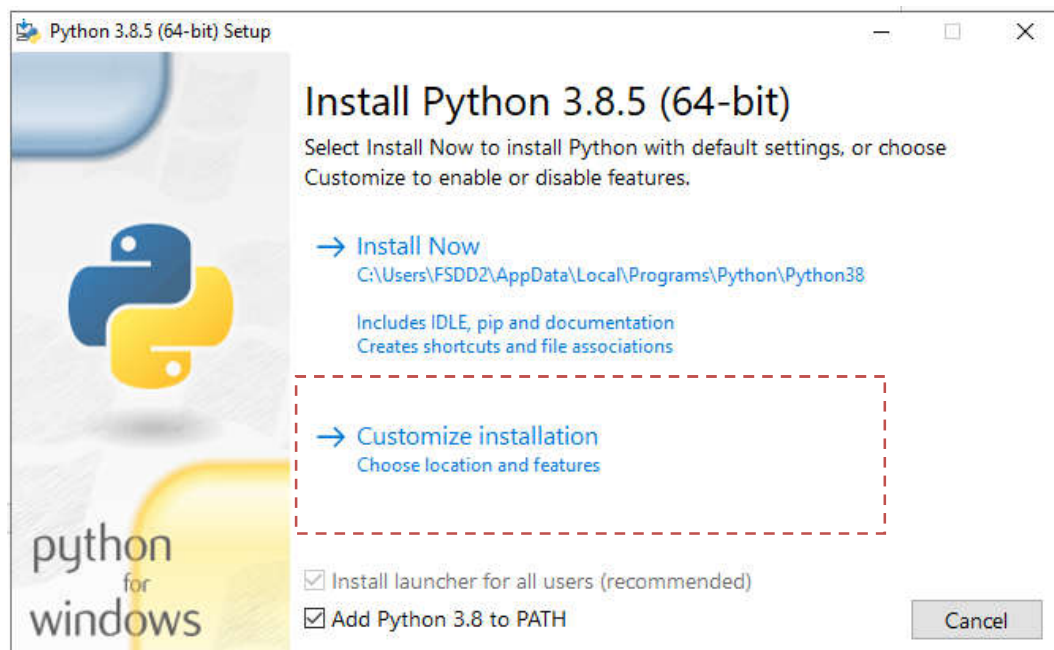




6. Click **Next** option.

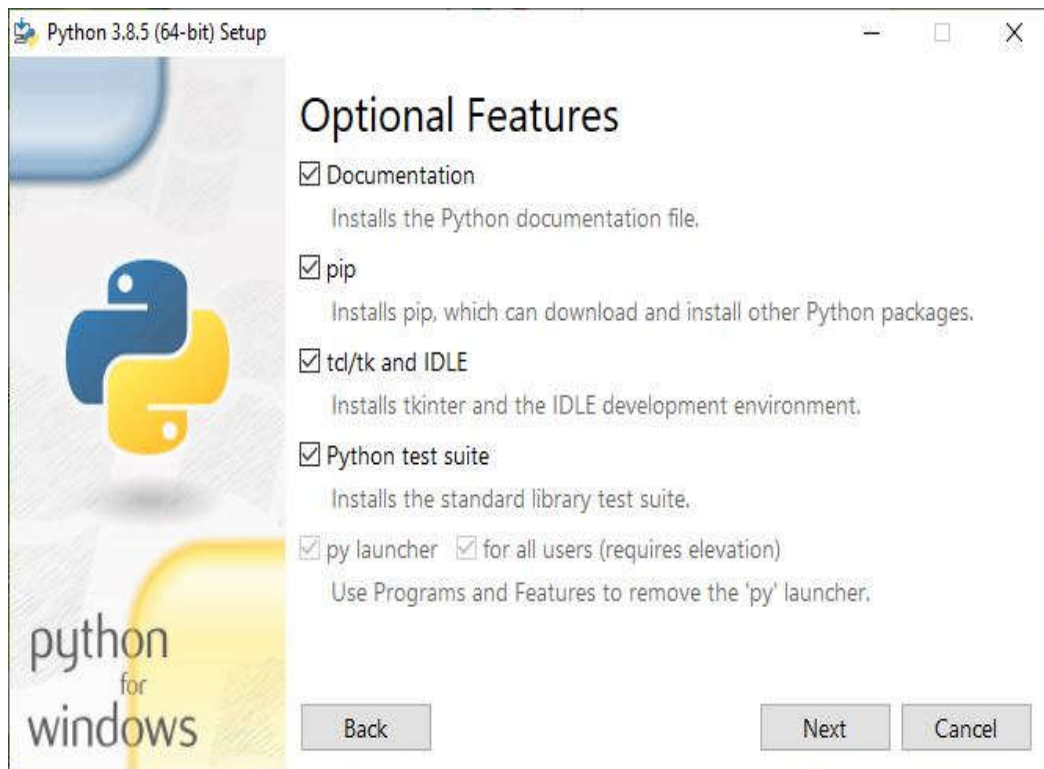


7. Select **first five check box** options and click **Install**.

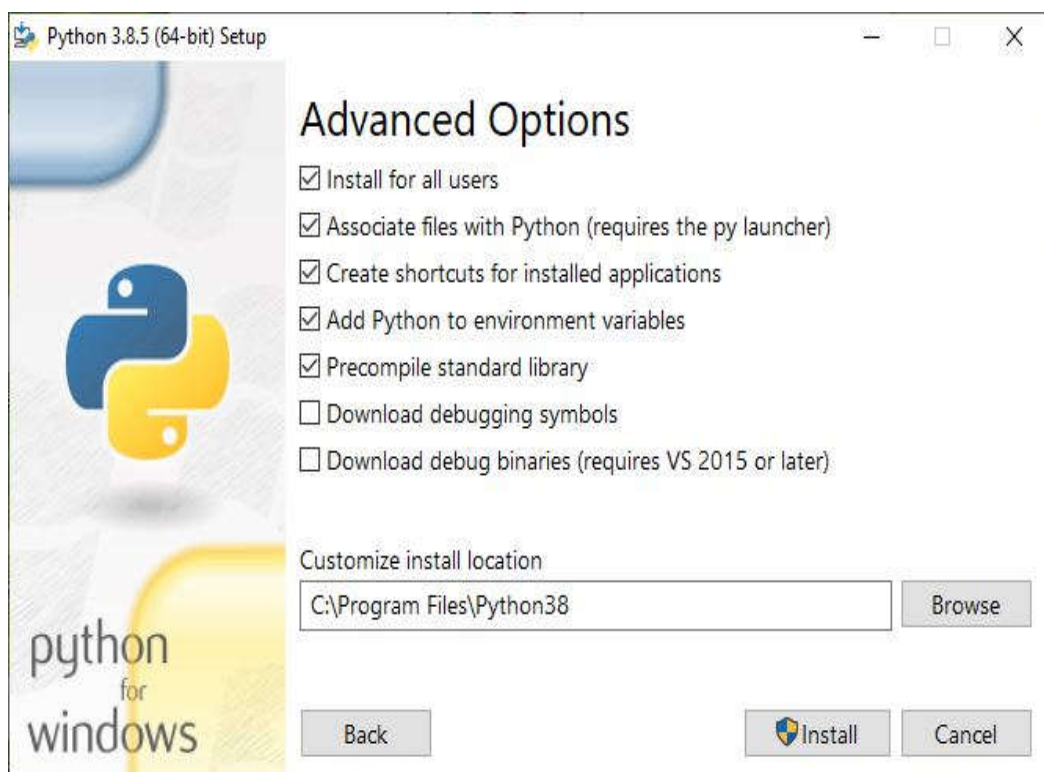




8. Wait for a few minutes.

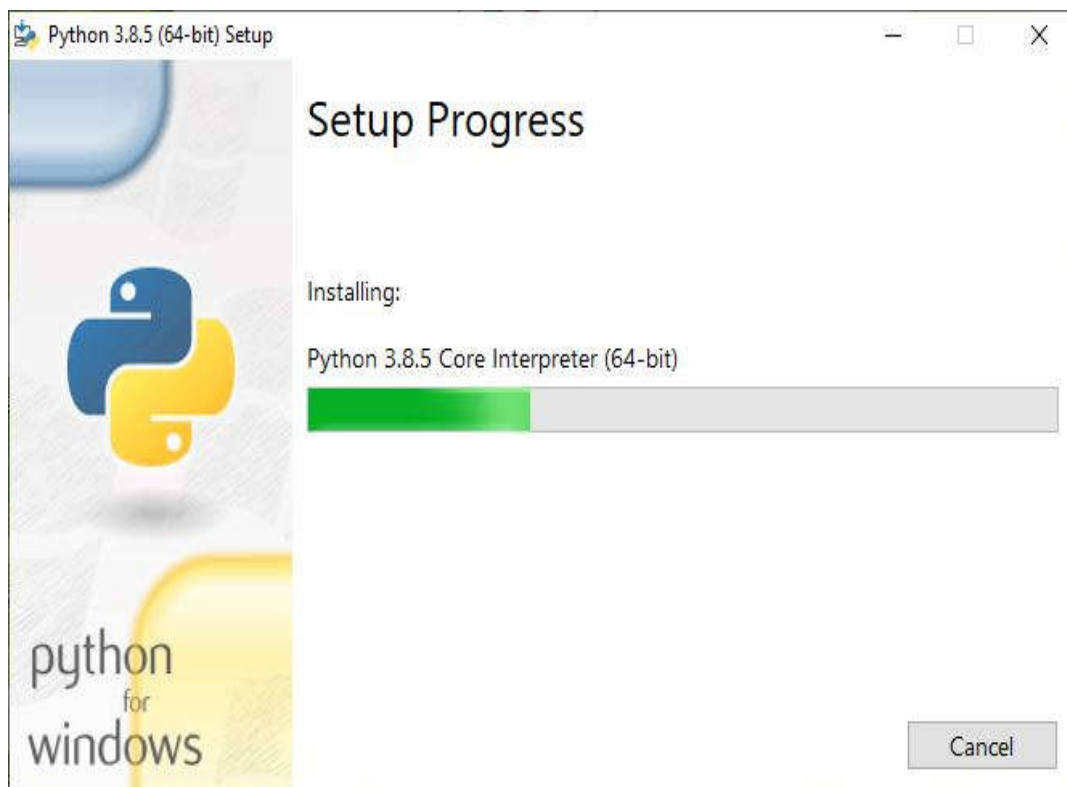


9. Click **Close** button.

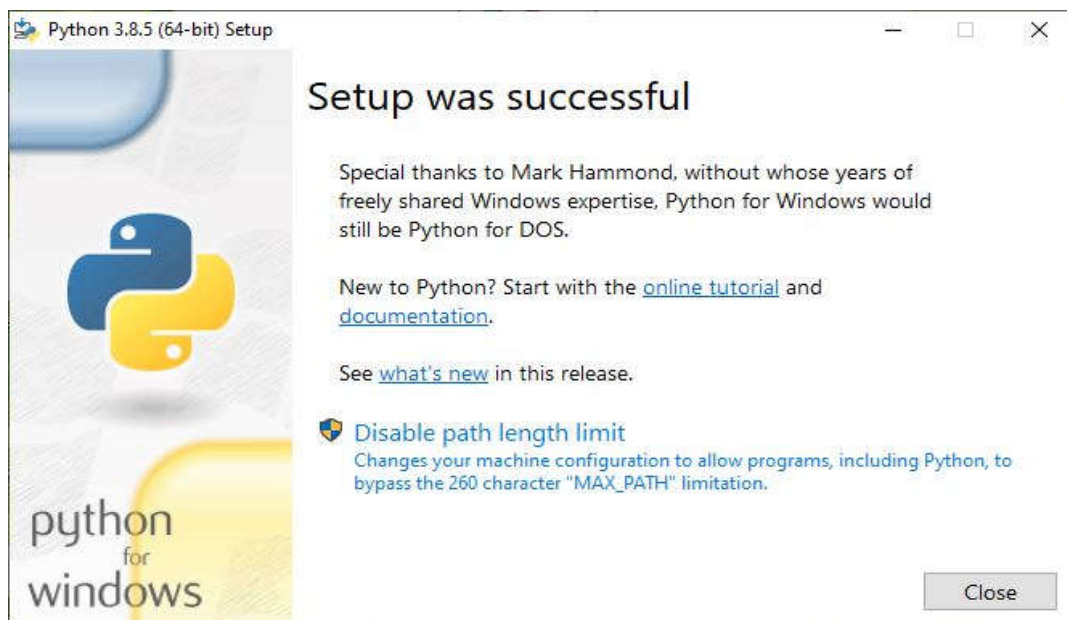




10. FEAST installation completed, click **Finish**.

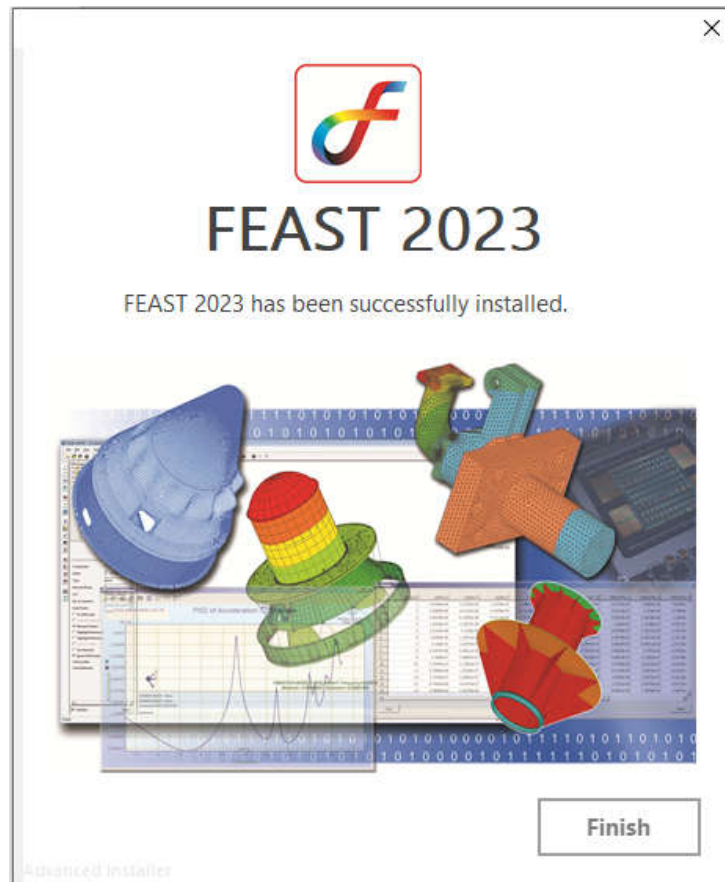

Running and Licensing of FEAST software

1. Double-click **FEAST 2023** shortcut from desktop.
2. FEAST Limited version execution starts.
3. Click **OK** to start the software.

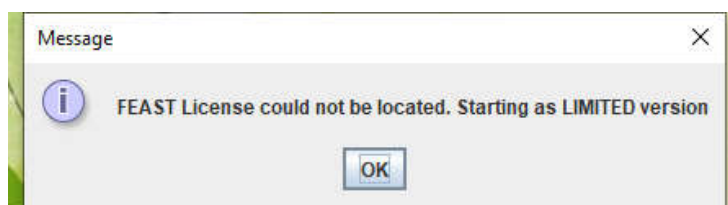

4. If license key is available, copy the license file (license.json) in to the FEAST installation folder and run the FEAST software.

-----The End-----